


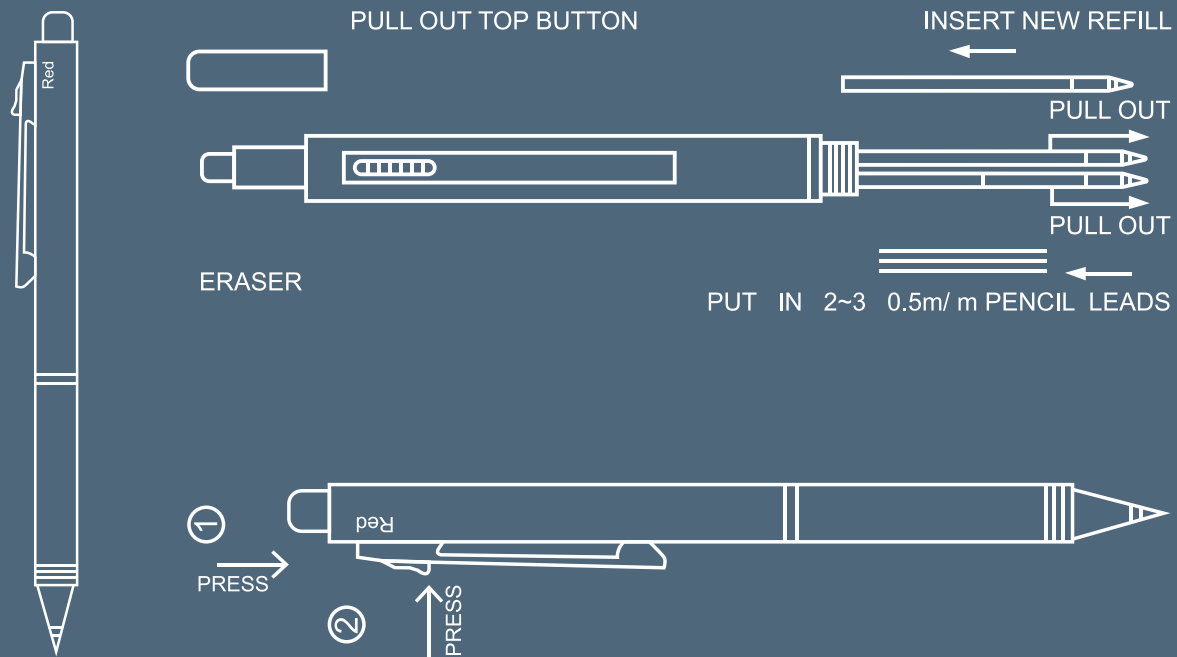

6119SL

Tine 4 in 1 Gravity pen

Instructions:

1. Choose the ink you desire faced to you and incline the pen backward about 30°. Then press the top button ① to extend the point.
2. To change another pen or mechanical pencil, press the black button ② on the clip to withdraw the point. Then repeat step 1.
3. To use the mechanical pencil, extend the pencil point by step 1 and press the top button ① 2-3 times to get the pencil lead.
4. To replace the refills, unscrew the lower barrel and pull out the refill. Then, insert the new refill and screw the lower barrel.
5. To add the pencil leads, unscrew the lower barrel and pull out the pencil part. Then, put 2-3 leads into the tube and insert the pencil part back to tube. Screw the lower barrel and repeat the step 3 to get the pencil lead.
6. To use the eraser, pull out the top button.